


Fre - 3033


Step 1

Remove the ground cable from all the battery's before removing the power cable. Remove all the wires from the battery's before. Removing the metal box.

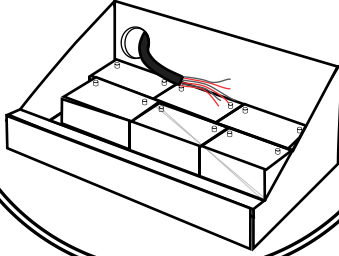


Step 2

Remove all the battery's. Remove the original battery box from the truck.

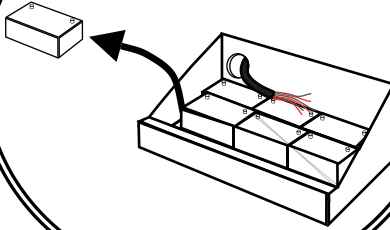


Step 3

Mount the new box in the same place.

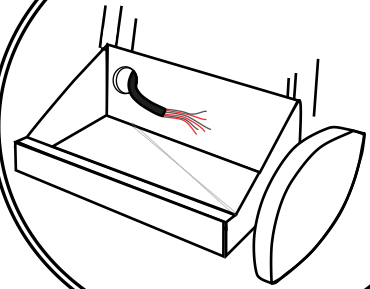


Step 4

One person holds the box while you insert the screws. Once all the screws are in, tighten them evenly. Install the straps on the side to hold the box down.

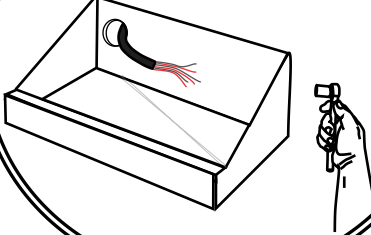


Step 5

Please the battery's back in box & reconnect the all the wire's.

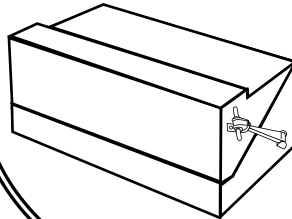

Step 6

Mount the lid on top of the battery box & drill holes to mount.

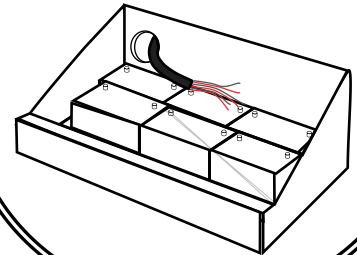


Note

- Take all safety precautions prior to installation.
- Installation requires two people.

Step 7

Bolt the step together. Mount to outer sides of the box base. You are finished! Clean with windex

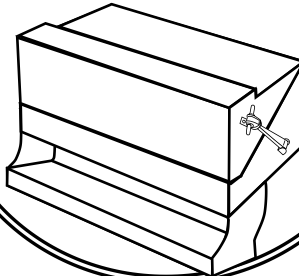

Bolt Kit

	QTY: 4	Hex Head	3/8 - 16 x 1 1/4
	QTY: 4	Finished Hex Nut	3/8 - 16
	QTY: 8	Flat Washer	1/4 x 5/8

