


P-1397


Step 1

Remove the three rivets from the top of mirror brackets in order to install the chop top.

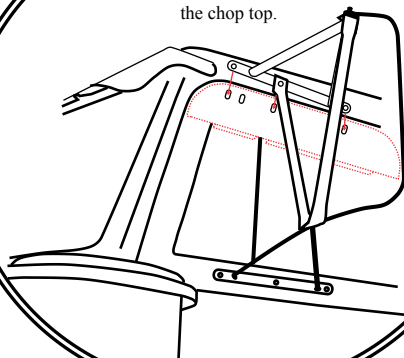



Step 3

"Very Cautiously" line up the holes on the chop top with the holes on the mirror brackets & place the chop top on the door. Apply pressure in order for double sided tape to stick property. Mount the mirror bracket back on top of the chop top.

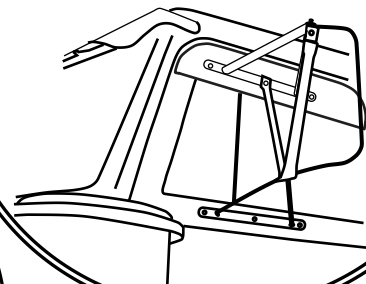

Step 2

Once you have marked the right spot for the chop top, Remove the protection tape.

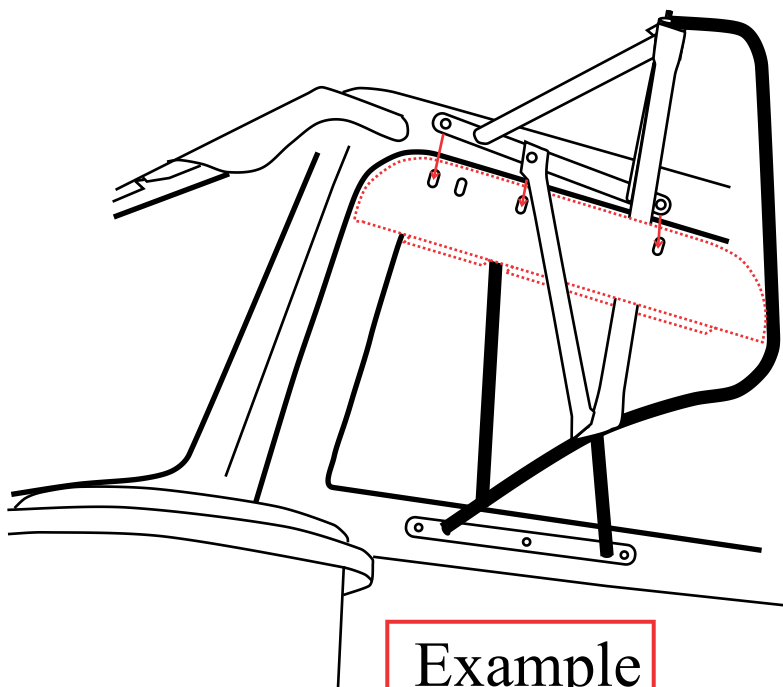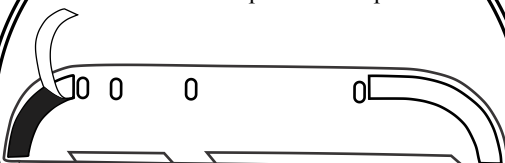


Example

Note

- Optional (sold separately) Mirror bracket mounting kit. Available through anyone of our listed distributors at www.arandatruckacc.com

Bolt Kit

	QTY: 1	Black Double Sided Foam Tape	1/2" x 24"
---	--------	------------------------------	------------